



ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	4310	1	Stopper Assembly	20	N/A	1	Enclosure Assembly (Not Available-Replace Unit)
2	N/A	1	Flange, Strainer	21	2467	1	Centrifugal Actuator Assembly
3	N/A	1	Gasket, Sink Flange	22	2638HG	1	Instruction Assy (Not Shown) (Includes Codes 23-26 & 36)
4	N/A	1	Flange, Backup	23	N/A	1	Washer, Flanged
5	N/A	1	Flange, Mounting	24	N/A	1	Washer, Beveled
6	N/A	3	Screw, Backup	25	N/A	1	Nut, 1 - 1/2" Slip
7	N/A	1	Ring, Retaining	26	N/A	1	Tailpipe
8	70368	1	Gasket, Mounting	27	4577	1	Wrench, Emergency (Not Shown)
9	N/A	1	Flange, Body	28	71969A	1	Stator Assembly
10	3173ED	1	Mounting Assembly Incl. codes 2 - 7 & 9)	29	3706C	1	Switch Assembly, Start
11	71970B	1	Trim Shell Assembly	30	2267CH	1	Overload, Protector
12	71826A	2	Self-Tapping Screw	31	4134	1	Shield, Wire
13	71752	1	Solenoid Assembly (Includes Codes 14, 16 & 17)	32	71875	1	End Frame Assembly, Lower (Includes Code 33)
14	71825	2	Screws	33	N/A	1	Screw, Ground
15	72087	1	Check Valve Assy	34	72647A	1	Cover, Terminal Assy
16	71754	1	Push Button	35	N/A	1	Screw, Terminal Cover
17	71755	1	Spring	36	72638	1	Use & Care Booklet
18	N/A	1	Bio-Charge™				
19	72029A	4	Bolt, Thru				